



Please read this document carefully before using this product. The guarantee will be invalidated if the device is damaged by not following instructions detailed in the manual. The company shall not be responsible for any damage or losses however caused, which may be experienced as a result of the installation or use of this product.

ENDA EDT2412 TEMPERATURE CONTROLLER

Thank you for choosing ENDA EDT2412 temperature controller.



- * 35x77mm.
- * On-Off control.
- * Relay output for cooling or heating control.
- * Single NTC probe input.
- * Offset value can be entered for NTC input.
- * Compressor protection parameters.
- * On probe failure, output status can be set to ON, OFF or periodic.
- * Upper and lower limits of the setpoint adjustment.
- * Defrost duration and interval can be adjusted.
- * 6 different warning tones.
- * Deviation high and low alarm values.
- * Temperature unit can be selected °C or °F.
- * Digital input (Optional).
- * Manual defrost or lighting feature.
- * Defrosting or lighting (configurable) can be started by using digital input.
- * Transfer device parameter settings with ENDA key - no power-up required.
- * RS485 ModBus protocol communication feature (optional).
- * Real Time Clock defrost and energy-saving feature.
- * CE marked according to European Norms.



Order Code: EDT2412- - - -

1 2 3 4

1 - Supply Voltage

- 110.....110V AC
- 230.....230V AC
- 2424V AC/DC
- 1212V AC/DC
- SM9-30V DC/7-24V AC

2-Output

- R..... 8A relay output
- P..... 20A relay output

4-ModBus

- RS.....ModBus (optional)


3- RTC

- Real time clock (optional)
- (Only valid for 8A relay output devices)


CONNECTION DIAGRAM



ENDA EDT2412 is intended for installation in control panels. Make sure that the device is used only for intended purpose. The electrical connections must be carried out by a qualified staff and must be according to the relevant locally applicable regulations. During an installation, all of the cables that are connected to the device must be free of electrical power. The device must be protected against inadmissible humidity, vibrations, severe soiling and make sure that the operation temperature is not exceeded. The cables should not be close to the power cables or components.

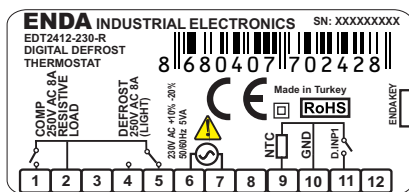


Equipment is protected throughout by **DOUBLE INSULATION**

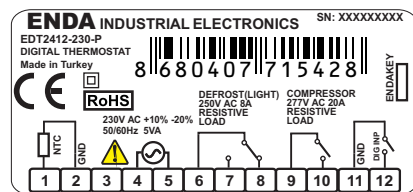

Holding screw 0.4-0.5Nm.

NOTE: SUPPLY:



Note:

- 1) Mains supply cords shall meet the requirements of IEC 60227 or IEC 60245.
- 2) In accordance with the safety regulations, the power supply switch shall bring the identification of the relevant instrument and it should be easily accessible by the operator.

ENVIRONMENTAL CONDITIONS

Ambient/storage temperature	0 ... +50°C/-25 ... 70°C (without icing)
Relative humidity	Relative humidity 80% for temperatures up to 31°C decreasing linearly to 50% relative humidity at 40°C.
Protection class	According to EN60529; Front panel: IP65 Rear panel: IP20
Height	Max. 2000m



Do not use the device in locations subject to corrosive and flammable gasses.

ELECTRICAL CHARACTERISTICS

Supply voltage	230V AC +%10 -%20, 50/60Hz or 12/24 V AC/DC ± %10
Power consumption	Max. 5VA
Connection	2.5mm² screw-terminal connections
Scale	-60.0 ... +150.0°C (-76.0 ... +302.0°F)
Sensitivity	0.1°C (Can be selected as 0.1°C or 1°C.)
Accuracy	±1°C
Time accuracy	±1%
Display	4 digits, 12.5mm, 7 segment LED
EMC	EN 61326-1: 2012
Safety requirements	EN 61010-1: 2010 (Pollution degree 2, overvoltage category II)

OUTPUTS

Compressor relay output	For EDT2412-X-R; Relay: NO+NC 250V AC,8A (for resistive load), 1/2hp, 0.37kW 240V AC (for inductive load) For EDT2412-X-P; Relay: NO 277V AC,20A (for resistive load), 2hp, 1.49kW 250V AC (for inductive load)
Defrosting and lighting relay output	For EDT2412-X-R; Relay:NO+NC 250V AC,8A (for resistive load), 1/2hp, 0.37kW 240V AC (for inductive load)
Life expectancy for compressor relay output	For EDT2412-X-R; Without load 30.000.000 switching; 250V AC, 8A (resistive load) 100.000 switching. For EDT2412-X-P; Without load 10.000.000 switching; 277V AC, 20A (resistive load) 100.000 switching.
Life expectancy for defrosting and lighting relay output	For EDT2412-X-R; Without load 30.000.000 switching; 250V AC, 8A (resistive load) 100.000 switching.

CONTROL

Control type	Single set-point control
Control algorithm	On-Off control
Hysteresis	Adjustable between 1 ... 20.0°C.


HOUSING

Housing type	Suitable for flush -panel mounting
Dimensions	W77xH35xD61mm
Weight	Approx. 190g (After packing)
Enclosure material	Self extinguishing plastics.




While cleaning the device, solvents (thinner, benzene, acid etc.) or corrosive materials must not be used.

DIMENSIONS

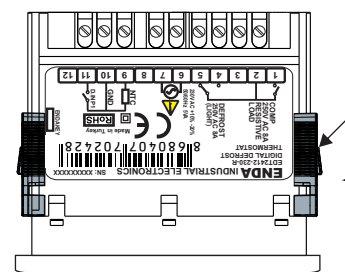

For removing mounting clamps:

- Push the flush-mounting clamp in direction 1 as shown in the figure below. Then, pull out the clamp in direction 2.

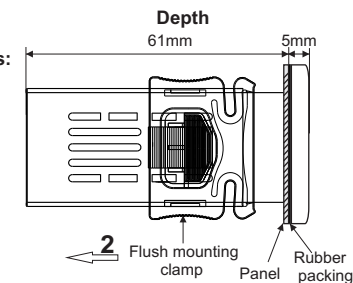


- Note:**
- 1) Panel thickness should be maximum 7mm.
 - 2) If there is no 60mm free space at the back side of the device, it would be difficult to remove it from the panel.



SİSEL MÜHENDİSLİK ELEKTRONİK SAN. VE TİC. A.Ş.
Şerifali Mah. Barbaros Cad. No:18 Y.Dudullu 34775
ÜMRANIYE/İSTANBUL-TÜRKİYE
Tel : +90 216 499 46 64 Pbx. Fax : +90 216 365 74 01
url : www.enda.com.tr



ENDA EDT2412-E-02-201408

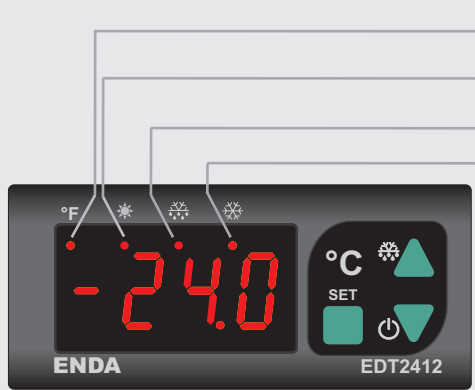

- °F **FAHRENHEIT LED:** In parameter value or the measured temperature value "°F" unit while this LED lights up. In the hidden menu at the same time the user menu parameter is shown the LED lights up.
- ☀ **HEATING LED:** Heating is being checked; while the output is active, the LED lights.
- ❄ **DEFROST LED:** With the defrost lights up.
- ❄ **COMPRESSOR LED:** If compressor output is active, this LED lights up. While these compressor delays expected, this LED flashes.
- SET While in the operating mode set value, while in the programming mode shows selected parameter's value.
- ▲ While in programming mode, provides the transition to the next parameter. If parameter is being adjusted, it increases parameter's value. Constantly holding this key, the parameter value rapidly increases.
- ▼ While in programming mode, provides the transition to the previous parameter. If parameter is being adjusted, it decreases parameter's value. Constantly holding this key, the parameter value rapidly decreases.


FRONT PANEL COMMANDS

1. Viewing and Changing The Set Value



While in the running mode, if key is pressed set value is displayed for 3 seconds. While in this case, the set value is changed with keys.

2. Locking and Unlocking Keys




While in the operating mode, if keys are pressed together among 2 seconds the *Loc* message is displayed and the keys are locked. If the keys are locked keys are pressed for 2 seconds again *unL* message is displayed and key lock is opened and is returned to the normal way of working. While keys are locked, if key is pressed, the set value can be displayed but the value can not be changed. While the keys are locked, key outside if a key is pressed the *Loc* message is seen.

3. Manual Defrost Process

While in the operating mode, if key is pressed for 2 seconds the defrost process is started as manual. If *ddur = 0*, the manual defrost will also be disabled.

4. Activating / Inactivating The Control Outputs




* When in the running mode, if the control outputs are inactive, *oFF* message displays periodically.

When in the running mode, if key is pressed for 2 seconds, *Cd 15* message is displayed and control outputs becomes to the inactive position, the device works as the indicator. When the control outputs are disabled; if key is pressed for 2 seconds *CEnb* is disabled and the device continues to do control function.

5. Changing Parameter Values

Keys are pressed together for 2 seconds *LP 17* is displayed and the user menu is entered, afterwards first parameter's name is displayed in the user menu.
While a parameter was selected, by pressing to key parameter's value is displayed, the displayed this parameter can be changed with keys. When the parameter name is shown, no action is done after 3 seconds or to the key is pressing again to return to the parameter's name. When the parameter name is shown, keys are pressed together immediately without waiting to get out of this process.

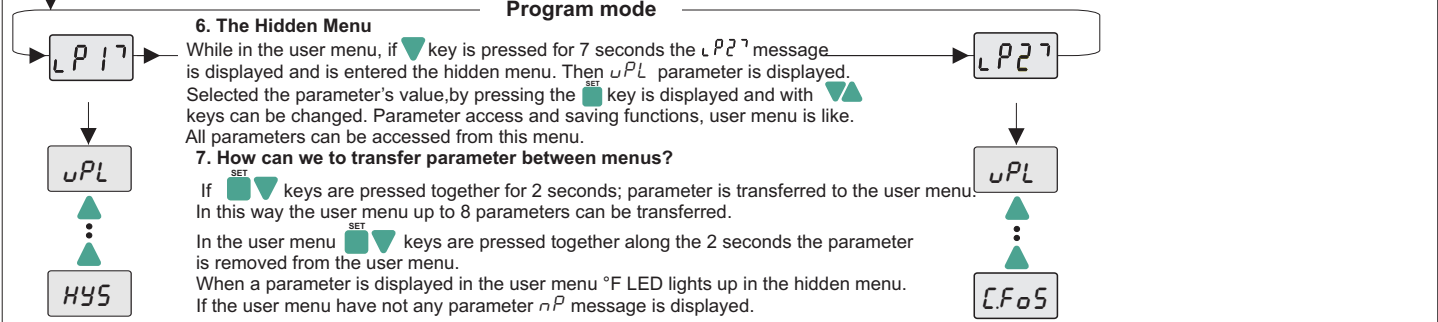

ERROR MESSAGES

- PFR* Means, thermostat probe is broken.
- P5C* Means, thermostat probe is short circuit.
- Temperature value is higher than the scale.
- Temperature value is lower than the scale.



ALARM SITUATION

- WW*
24.0
--- 1. When the alarm situation occurred, the measured value flashes in the indicator and if "wnd" parameter is not "0" is given audible alarm by the device. While there are a audible warning ; key is pressed, the audible warning will be disabled.
- WW*
EA
--- 2. External alarm is activated but output's is not affected by this situation.
- WW*
SA
--- 3. Except that the alarm has been activated and external alarm output relay is active when the show shut down. (off situation).
4. Buzzer voice warning is given; if any key is pressed the buzzer will be silenced.

HOW CAN WE RETURN THE DEVICE TO THE FACTORY SETTINGS

Key is held down while the device is powered up the *dPAR* message will see and restore the factory parameters.

OUTPUT GRAPHICS

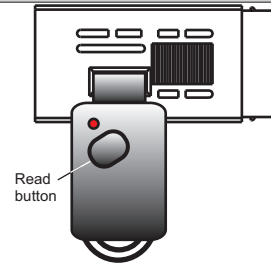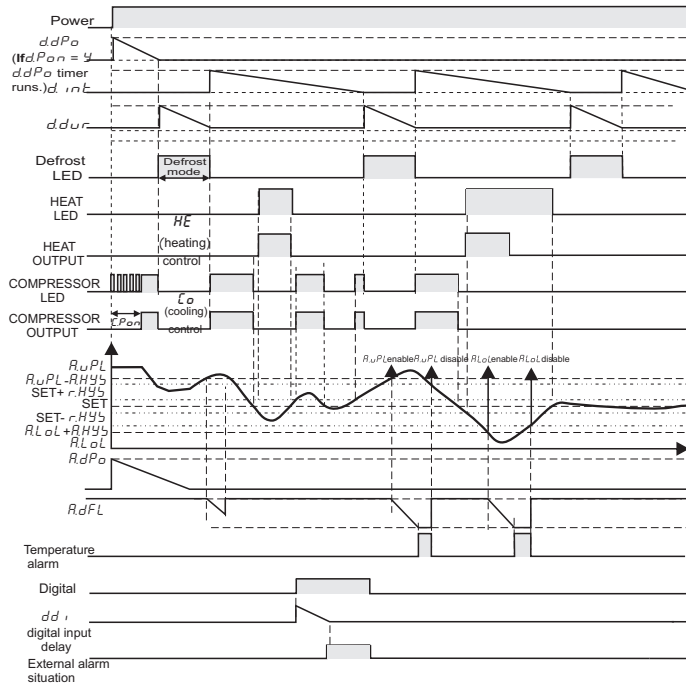

How Can We Download The Parameters From ENDAKEY To The Device?

While in the running mode; if **▼** key or "Read" button (in ENDAKEY) are pressed; is displayed "dL" message and parameters are read in ENDAKEY. "dL" message appears when the **▼** key is pressed again, reading parameter values from the ENDAKEY are transferred to the device. If the parameter transfer is successful, "rEF" message is displayed and the device begins to work with downloaded parameters value. The parameter in the ENDAKEY, while belonging to a different device of if there is a malfunction in the ENDAKEY "Errr" message is displayed and the parameters of the device unchanged.

How Can We Upload The Parameters From Device To The ENDAKEY?

While in the running mode; if **▲** key is pressed "uL" message is displayed and again **▲** key is pressed; if there is no error, the parameters in the device are loaded in to the ENDAKEY and "SuC" message is displayed. If there is a malfunction in the device and the installation failed "Errr" message is displayed.

NOTE 1: To the device without energy, the parameter transfer is done with ENDAKEY. The battery inside the ENDAKEY for a longer period of time; after the parameter transfer process, the connection between the ENDAKEY and the device should be disconnected.

NOTE 2: ENDAKEY device is supplied with orders if requested.

CONTROL PARAMETERS

		MIN.	MAX.	UNIT	DEF. SET
<i>uPL</i>	The upper limit of the setpoint	-600	<i>uPL</i>	°C	150
<i>LoL</i>	The lower limit of the setpoint	<i>LoL</i>	1500	°C	-60
<i>HYS</i>	Switch hysteresis for compressor (hysteresis)	0.1	200	°C	2
<i>oFF</i>	The offset value for the refrigeration	-200	200	°C	0

CONFIGURATION PARAMETERS

<i>CLYP</i>	Control type selection (<i>HE</i> =(*) heating control is selected, <i>Lo</i> = Cooling control is selected.) <i>CLYP</i> parameter as <i>HE</i> is selected, the defrost function of the device is disabled.	<i>Lo</i>	<i>HE</i>		<i>Lo</i>
<i>LoUt</i>	Defrosting(lighting) relay output type selection. (<i>dEF</i> = relay is used for defrosting. <i>Loht</i> = relay is used for lighting)	<i>dEF</i>	<i>Loht</i>		<i>dEF</i>
<i>UnIt</i>	Temperature unit	°C	°F		°C
<i>dPnt</i>	Decimal point (<i>no</i> = decimal point isn't shown 22°C, <i>YES</i> =decimal point is shown 22.3°C.)	<i>no</i>	<i>YES</i>		<i>no</i>
<i>Snd</i>	Type of buzzer sound (6 different voice types can be selected. Alarm during <i>0</i> is chosen, the voice warning is canceled.) For Relay-8A is valid.	0	6		0
<i>d.inP</i>	Digital input types. <i>nd</i> : Digital input unused. <i>ER</i> : External alarm. <i>ER</i> message flashes in the display. Output unchanged. <i>SR</i> : Important external alarm. <i>SR</i> message flashes in the display. Relay output is turned off. <i>HC</i> :	<i>nd</i>	<i>dF</i>		<i>nd</i>
<i>ddi</i>	Digital input delay. The period of the digital inputs to be active.	0:00	99:00		0:00
<i>dPo</i>	Digital input polarity. <i>CL</i> = While a digital input contact is closed, it is activated. <i>oP</i> = While a digital input is opened, it is activated.	<i>CL</i>	<i>oP</i>		<i>CL</i>

COMPRESSOR PROTECTION PARAMETERS

<i>CPon</i>	Delay time for the compressor after power is on.	0:00	99:00	min:sec	1:00
<i>CFoS</i>	Delay time required for the compressor to restart following a stop.	0:00	99:00	min:sec	1:00
<i>CPPn</i>	On time for the compressor output in the case of probe failure.	0:00	99:00	min:sec	0:00
<i>CPPF</i>	Off time for the compressor output in the case of probe failure	0:00	99:00	min:sec	1:00

DEFROST CONTROL PARAMETERS

<i>ddur</i>	Defrost duration (If <i>ddur</i> =0, automatic and manual defrost are disabled.)	0:00	99:00	min:sec	1:00
<i>d.inT</i>	The time between 2 consecutive defrosts.	1:00	99:00	hr:min	1:00
<i>ddSP</i>	During defrost, display configuration (<i>rE</i> = Real temperature is displayed during defrost. (<i>Lc</i> = The temperature which is measured before defrost is displayed during defrost.	<i>Lc</i>	<i>rE</i>		<i>Lc</i>
<i>ddrE</i>	Delay time for display real temperature after defrost is over.	0:00	99:00	min:sec	1:00
<i>dPon</i>	Defrosting process begins with energy (<i>no</i> =Defrost process doesn't start when, the energy comes. <i>YES</i> =Defrost process starts when the energy comes.)	<i>no</i>	<i>YES</i>		<i>no</i>
<i>ddPo</i>	Delay time for defrosting after power is on.	0:00	99:00	min:sec	1:00
<i>ddrE</i>	Dripping (discharge) time	0:00	99:00	min:sec	2:00

ALARM CONTROL PARAMETERS

<i>RuPL</i>	Limit for upper alarm level. When <i>RLYP</i> is changed, <i>RuPL</i> should be readjusted.	<i>RL oL</i>	1500	°C	150
<i>RL oL</i>	Limit for lower alarm level. When <i>RLYP</i> is changed, <i>RL oL</i> should be readjusted.	-600	<i>RuPL</i>	°C	-60
<i>RHYS</i>	Switch hysteresis for alarm.	0.1	200	°C	2
<i>RLYP</i>	Alarm configuration. (<i>AbS</i> =Absolute alarm. Alarm values are <i>RL oL</i> and <i>RuPL</i> .) (<i>rEF</i> = Relative alarm. Alarm values are SET- <i>RL oL</i> and SET+ <i>RuPL</i> .) NOTE: Upper and Lower alarm level variables are determined according to the "RLYP" parameter. If <i>RLYP</i> = <i>AbS</i> , <i>RL oL</i> and <i>RuPL</i> . If <i>RLYP</i> = <i>rEF</i> , <i>LoL</i> = SET- <i>RL oL</i> and <i>RuPL</i> .	<i>AbS</i>	<i>rEF</i>		<i>AbS</i>
<i>RdFL</i>	Time delay to display alarm message after alarm is on.	0:00	99:00	min:sec	0:00
<i>RdPo</i>	Time delay to display alarm message after power is on.	0:00	24:00	hr:min	0:10
<i>RdRS</i>	RS485 Network address for the connection of the device. Adjustable between 1-247.				1
<i>bRud</i>	Baudrate (0=Off; 1=1200; 2=2400; 3=4800; 4=9600; 5=19200)				9600
<i>cSr</i>	The holding parameter of control outputs state when the supply is powered off.	<i>no</i>	<i>YES</i>		<i>YES</i>
<i>tSr</i>	The holding parameter of keypad lock state when the supply is powered off.	<i>no</i>	<i>YES</i>		<i>no</i>

ENDA EDT2412 DIGITAL THERMOSTAT RTC PARAMETERS

RTC SET PARAMETERS

		Min.	Max.	Unit	Status
<i>hour</i>	The device time setting	0	23	hour	0
<i>min</i>	The device minute setting	0	59	minute	0
<i>day</i>	The device day setting <i>Sun, non, tuE, WEd, thu, Fri, Sat</i>	<i>Sun</i>	<i>Sat</i>	day	<i>Sun</i>
<i>ht1</i>	The first day of the week holiday. <i>Sun, non, tuE, WEd, thu, Fri, Sat, nu</i> . (If <i>nu</i> is chosen, holidays are not selected and it is perceived as working days.)	<i>Sun</i>	<i>nu</i>	day	<i>nu</i>
<i>ht2</i>	The second day of the week holiday. <i>Sun, non, tuE, WEd, thu, Fri, Sat, nu</i> . (If <i>nu</i> is chosen, holiday are not selected and it is perceived as working days.)	<i>Sun</i>	<i>nu</i>	day	<i>nu</i>

DEFROST CONTROL PARAMETERS

<i>dtyp</i>	The device defrost type. (<i>nor</i> :with interval times defrost, <i>rtc</i> : with real time clock defrost)	<i>nor</i>	<i>rtc</i>	-	<i>nor</i>
<i>Ad1</i> <i>id6</i>	<i>Ad1, id2, id3, id4, id5, id6</i> Defrost status time in the range of <i>Ad1- id6</i> workdays.(If this status time= <i>24:00</i> ,defrost process is not performed.)	<i>00:00</i>	<i>24:00</i>	hr:min	<i>24:00</i>
<i>td1</i> <i>td6</i>	<i>td1, td2, td3, td4, td5, td6</i> . Defrost status time in the range of <i>td1- td6</i> holidays. (If this status time= <i>24:00</i> defrost process is not performed.)	<i>00:00</i>	<i>24:00</i>	hr:min	<i>24:00</i>

ENERGY-SAVING PARAMETERS

<i>Add</i>	Energy-saving value of the difference set (During the energy-saving SET=SET+ <i>Add</i> . Energy-saving during ,the set value does not change.	<i>-20</i>	<i>20</i>	°C/°F	0
<i>REt</i>	Energy-saving start time of the workday.(If this status time= <i>24:00</i> energy-saving will not be made.)	<i>00:00</i>	<i>24:00</i>	hr:min	<i>24:00</i>
<i>RES</i>	Workday energy-saving time(If this status time= <i>00:00</i> energy-saving will not be made.)	<i>00:00</i>	<i>24:00</i>	hr:min	<i>24:00</i>
<i>TEt</i>	Energy-saving start time of the holiday.(If this status time <i>24:00</i> energy-saving will not be made.)	<i>00:00</i>	<i>24:00</i>	hr:min	<i>24:00</i>
<i>TES</i>	Holiday energy-saving time(If this status time: <i>00:00</i> energy-saving will not be made.)	<i>00:00</i>	<i>24:00</i>	hr:min	<i>24:00</i>

REAL TIME CLOCK FEATURE

At first power up of the device; hour, minute, day must be adjusted. In addition, an optional holiday in each week can be assigned to the desired days.All the days of the week "workday" is entered as requested, *ht1* and *ht2* parameters should be chosen as "nu". This sets the device is powered down, even after the 2500 real time clock continuous to run throughout the day. With this feature, defrost control and energy-saving can be requested.

LIGHTING PARAMETERS

<i>R.1St</i>	Weekday lighting start time	<i>00:00</i>	<i>24:00</i>	hr:min	<i>24:00</i>
<i>R.1Fd</i>	Weekday lighting finish time	<i>00:00</i>	<i>24:00</i>	hr:min	<i>24:00</i>
<i>E.1St</i>	Weekend lighting start time	<i>00:00</i>	<i>24:00</i>	hr:min	<i>24:00</i>
<i>E.1Fd</i>	Weekend lighting finish time	<i>00:00</i>	<i>24:00</i>	hr:min	<i>24:00</i>

MODBUS COMMUNICATION PARAMETERS

<i>AdrS</i>	Device address for RS485 network connection.Adjustable between 1-247.	<i>1</i>	<i>247</i>	-	<i>1</i>
<i>bAud</i>	Baudrate (0=Off;1=1200;2=2400; 3=4800; 4=9600; 5=19200)	<i>off</i>	<i>19.20</i>	-	<i>9600</i>

ENDA EDT2412 DIGITAL THERMOSTAT MODBUS PROTOCOL ADDRESS MAP

1.1 HOLDING REGISTERS

Holding Register Addresses		Data Type	Data Content	Parameter Name	Read/Write Permission	Status Value
Decimal	Hex					
0000d	0x0000	word	Set value	--	Readable/Writeable	-20
0001d	0x0001	word	Set point upper limit	uPL	Readable/Writeable	150
0002d	0x0002	word	Set point lower limit	LoL	Readable/Writeable	-60
0003d	0x0003	word	Cooling hysteresis	HYS	Readable/Writeable	2
0004d	0x0004	word	Offset value for the cooling	oFF	Readable/Writeable	0
0005d	0x0005	word	Type of buzzer sound	5nd	Readable/Writeable	0
0006d	0x0006	word	Digital input types .0=nd;1=EA;2=5R;3=HC;4=dF	d.inP	Readable/Writeable	nd
0007d	0x0007	word	Digital input delay	ddi	Readable/Writeable	0:00(0 sec)
0008d	0x0008	word	Delay time for the compressor after power is on.	C.Pon	Readable/Writeable	1:00(60 sec)
0009d	0x0009	word	Delay time required for the compressor to restart following a stop.	C.FoS	Readable/Writeable	0:00(0 sec)
0010d	0x000A	word	On time for the compressor output in the case of probe failure	C.PPn	Readable/Writeable	0:00(0 sec)
0011d	0x000B	word	Off time for the compressor output in the case of probe failure	C.PPF	Readable/Writeable	1:00(60 sec)
0012d	0x000C	word	Defrost duration	d.dur	Readable/Writeable	1:00(60 sec)
0013d	0x000D	word	The time between 2 consecutive defrosts.	d.int	Readable/Writeable	1:00(60 min)
0014d	0x000E	word	Delay time for displaying the real temperature after completion of defrosting	d.dre	Readable/Writeable	1:00(60 sec)
0015d	0x000F	word	Delay time for defrosting after power is on.	d.dPo	Readable/Writeable	1:00(60 sec)
0016d	0x0010	word	Dripping (discharge) time	d.drt	Readable/Writeable	2:00(120 sec)
0017d	0x0011	word	Upper level alarm	R.uPL	Readable/Writeable	150
0018d	0x0012	word	Lower level alarm	R.LoL	Readable/Writeable	-60
0019d	0x0013	word	Switch hysteresis for alarm	R.HYS	Readable/Writeable	2
0020d	0x0014	word	Time delay to display alarm message after alarm is on.	R.dFL	Readable/Writeable	0:00(0 sec)
0021d	0x0015	word	Time delay to display alarm message after power is on.	R.dPo	Readable/Writeable	0:10(10 min)
0022d	0x0016	word	RS485 Network address for the connection of the device. Adjustable between 1-247.	R.drs	Readable/Writeable	1
0023d	0x0017	word	Baudrate (0=Off; 1=1200; 2=2400; 3=4800; 4=9600; 5=19200)	bRad	Readable/Writeable	9600
0024d	0x0018	word	The device time setting	hour	Readable/Writeable	0
0025d	0x0019	word	The device minute setting	min	Readable/Writeable	0
0026d	0x001A	word	The device day setting (Sun, Mon, Tue, Wed, Thu, Fri, Sat)	dAY	Readable/Writeable	0(Sun)
0027d	0x001B	word	The first day of the week holiday (Sun, Mon, Wed, Thu, Fri, Sat, nu)	hd1	Readable/Writeable	7(nu)
0028d	0x001C	word	The second day of the week holiday (Sun, Mon, Wed, Thu, Fri, Sat, nu)	hd2	Readable/Writeable	7(nu)
0029d	0x001D	word	Defrost start time of the 1. workday	id1	Readable/Writeable	24:00(hr:min)
0030d	0x001E	word	Defrost start time of the 2 workday	id2	Readable/Writeable	24:00(hr:min)
0031d	0x001F	word	Defrost start time of the 3. workday	id3	Readable/Writeable	24:00(hr:min)
0032d	0x0020	word	Defrost start time of the 4. workday	id4	Readable/Writeable	24:00(hr:min)
0033d	0x0021	word	Defrost start time of the 5. workday	id5	Readable/Writeable	24:00(hr:min)
0034d	0x0022	word	Defrost start time of the 6. workday	id6	Readable/Writeable	24:00(hr:min)
0035d	0x0023	word	Defrost start time of the 1. holiday	td1	Readable/Writeable	24:00(hr:min)
0036d	0x0024	word	Defrost start time of the 2. holiday	td2	Readable/Writeable	24:00(hr:min)
0037d	0x0025	word	Defrost start time of the 3.holiday	td3	Readable/Writeable	24:00(hr:min)
0038d	0x0026	word	Defrost start time of the 4. holiday	td4	Readable/Writeable	24:00(hr:min)
0039d	0x0027	word	Defrost start time of the 5. holiday	td5	Readable/Writeable	24:00(hr:min)
0040d	0x0028	word	Defrost start time of the 6.holiday	td6	Readable/Writeable	24:00(hr:min)
0041d	0x0029	word	Energy-saving value of the difference set	Rdd	Readable/Writeable	0
0042d	0x002A	word	Energy-saving start time of the workday	iEt	Readable/Writeable	24:00(hr:min)
0043d	0x002B	word	Workday energy-saving time	iEb	Readable/Writeable	00:00
0044d	0x002C	word	Energy-saving start time of the holiday	tEt	Readable/Writeable	24:00(hr:min)
0045d	0x002D	word	Holiday energy-saving time	tEb	Readable/Writeable	00:00

RTC REAL TIME CLOCK PARAMETERS

RTC PARAMETERS	0046d	0x002E	word	Start time of Lighting on workdays	<i>i 15 t</i>	Readable/Writeable	24:00(hr:min)
	0047d	0x002F	word	End time of Lighting on workdays	<i>i 1 F d</i>	Readable/Writeable	00:00
	0048d	0x0030	word	Start time of Lighting on holidays	<i>t 15 t</i>	Readable/Writeable	24:00(hr:min)
	0049d	0x0031	word	End time of Lighting on holidays	<i>t 1 F d</i>	Readable/Writeable	00:00
	* Holding Register parameter of type integer,those "signed integer" is defined as the decimal port of and associated with these parameters. (So,"14.0" is a parameter value of "140" will be read in.)Relevant parameters for a period of "mm:ss" type ones in seconds,"hh:mm" while those species defined in minutes.						

1.2 INPUT REGISTERS

Input Register Addresses		Data Type	Data Content	Parameter Name	Read/Write Permission
Decimal	Hex				
0000d	0x0000	word	Measured temperature value (°C / °F)	--	Only readable

* Input Register parameter value of the temperature reading, is defined as a signed integer. This value is associated with a portion. (So, "23,5°C" value of temperature "235" will be read in.)

1.3 DISCRETE INPUTS

Discrete Input Addresses		Data Type	Data Content	Parameter Name	Read/Write Permission
Decimal	Hex				
0000d	0x00	Bit	Control output situation (compressor relay) (0=OFF; 1=ON)	--	Only readable
0001d	0x01	Bit	Control output situation (defrost/lighting relay) (0=OFF; 1=ON)	--	Only readable

1.4 COILS

Coil Addresses		Data Type	Data Content	Parameter Name	Read/Write Permission	Status Value
Decimal	Hex					
00d	0x00	Bit	Control type selection. OFF=Cooling control (<i>L o</i>) ON=Heating control(<i>H E</i>)	<i>L t Y P</i>	Readable/Writeable	<i>L o</i>
01d	0x01	Bit	Control type selection. OFF=Cooling control (<i>L o</i>) ON=Heating control(<i>H E</i>)	<i>L t Y P</i>	Readable/Writeable	<i>L o</i>
02d	0x02	Bit	Temperature unit. OFF=°C ON=°F	<i>U n i t</i>	Readable/Writeable	<i>o C</i>
03d	0x03	Bit	Decimal point . OFF= <i>n o</i> ON= <i>Y E S</i>	<i>d P n t</i>	Readable/Writeable	<i>n o</i>
04d	0x04	Bit	During defrost, display configuration. OFF=The temperature which is measured before defrost is displayed. (<i>L c</i>) ON=Real temperature is displayed during defrost process. (<i>r E</i>)	<i>d d S P</i>	Readable/Writeable	<i>L c</i>
05d	0x05	Bit	Defrosting process begins with energy. OFF=Defrost process doesn't start when, the energy comes. (<i>n o</i>) ON=Defrost process starts when the energy comes. (<i>Y E S</i>)	<i>d P o n</i>	Readable/Writeable	<i>n o</i>
06d	0x06	Bit	Alarm configuration .OFF=Absolute alarm (<i>A b S</i>) ON=Relative alarm (<i>r E F</i>)	<i>A t Y P</i>	Readable/Writeable	<i>A b S</i>
07d	0x07	Bit	Digital input polarity. OFF=While a digital input contact is closed, it is activated. (<i>c L</i>) ON=While a digital input is opened, it is activated (<i>o P</i>)	<i>d P o</i>	Readable/Writeable	<i>c L</i>
08d	0x08	Bit	Defrost type selection OFF=Electrical defrost (<i>E L L</i>) ON=Hot gas defrost (<i>U R S</i>)	<i>d t Y P</i>	Readable/Writeable	<i>E L L</i>
09d	0x09	Bit	Defrost type (OFF=The normal operation of the defrost. (<i>n o r</i>) ON=Defrost operation with RTC (<i>r t c</i>))	<i>d r t c</i>	Readable/Writeable	<i>n o r</i>
010d	0x0A	Bit	Control situation. OFF=Control passive. (<i>L d i S</i>) ON=Control active (<i>L E n b</i>)	--	Readable/Writeable	<i>o n</i>

*Control situation (coil-10) is read from coil-9 address, because *d r t c* (coil-9) parameter is absent in devices without RTC.